

TRX44

4 input / 4 output transceiver

Antenna

Operation:

Once a TRX44 is paired to another TRX44, triggering an input on one, will activate the corresponding output on the other.

The action/status of the inputs of one unit are copied to the outputs on the paired device: (ON, OFF or PULSE)

Each TRX has 2 settings: MyAddress (its own address) and PairAddress (the address of the paired unit)

Programming:

Step1

To enter into programming press and hold Buttons INC & STEP *whilst applying power* until the GREEN LED flashes

Programming MyAddress

Do Step 1

Press INC button 1 time

Press STEP button 1 time

Press the INC button for the number of times of the **My-Address** (Maximum 9) followed by the STEP button . i.e. address ID of 4 = press INC 4 times followed by STEP

Both ORANGE and RED LEDs will alternate.
Press and hold both INC and STEP to exit programming

Programming The Pair-Address

Do Step 1



Press INC button 2 times

Press STEP button 1 time

Press INC button for the number of times of the **Pair-Address** (Maximum 9) followed by the STEP button . i.e. address ID of 3 = press INC 3 times followed by STEP

Both ORANGE and RED LEDs will alternate.
Press and hold INC and STEP to exit programming

Remove power and powerup again ,
MyAddress will be indicated by the Yellow LED and
PairAddress by the Green LED

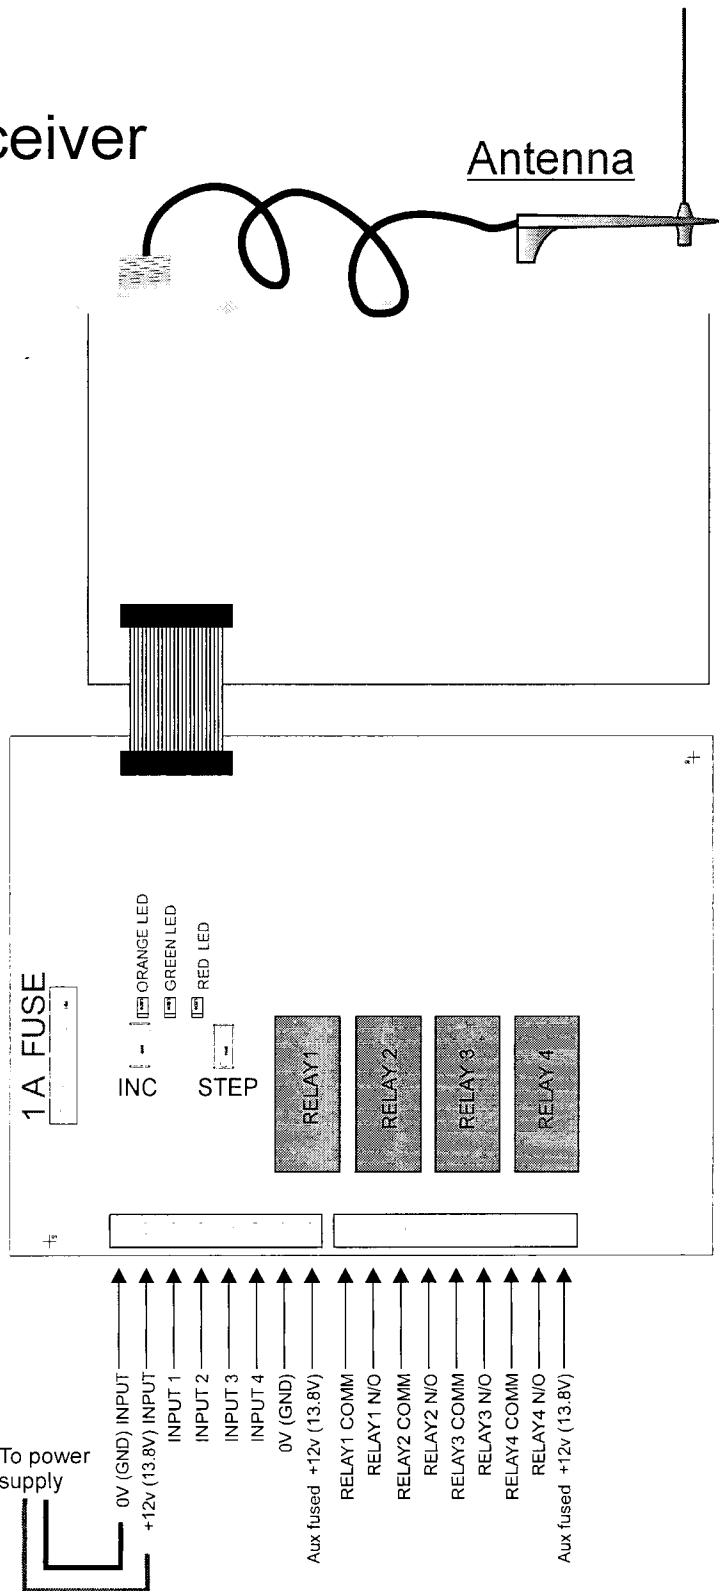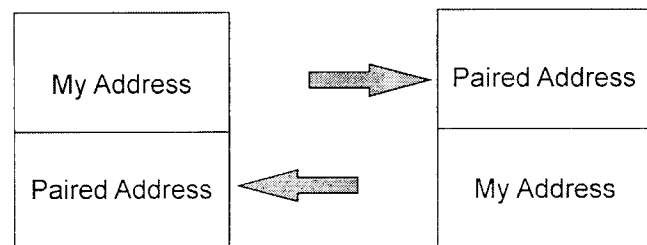

To power supply

- Inputs are positive triggered
- Relay contacts are rated at 8A/250V

NB: connect antenna before powering up the system
Note:

The system uses a licence free wireless band and successful communication can not be guaranteed due to `interference that may occur.