

SIGmo611

SigFox/LoRaWAN/Ethernet Programmable Communicator

6 inputs, 1 dialer, 1 output







Description

www.mami.co.za

The Sigmo is a monitoring device that will send the change input status as well as contact ID dialed from alarm panels to an alarm control room base station and/or mobile APP.

Depending on the version the Sigmo can communicate to the cloud using ethernet, Sigfox or LoRaWAN networks.

Boot up

On boot up the Green status LED will flash and the RED error LED will remain on. After approximately 1 minute the Red LED should turn off indicating the availability of Ethernet connectivity, Sigfox or LoRaWan networks

Panel Programming of Contact ID

Program Telephone number '22' to be dialed and ADEMCO Contact ID into the Alarm panel being monitored.

Receiving Compatible devices:

- MAMI GPRS base station
- MAMI Virtual Base station
- Mission Control Mobile App
- Mission Control Room

Versions:

Sigmo611S - Sigfox Sigmo611L - LoRa/LoRaWAN Sigmo611E - Ethernet

Relay output:

The relay output can be triggered through cloud callback via mobile APP and MissonControlRoom

LED Indications

GREEN Status LED

Slow = Device Idle Fast = Device waiting for panel to dial

RED Error LED
ON = Waiting for network Callback
Flashing = Incorrect ContactID checksum

868MHz Sigfox 868MHz LoRaWAN SMA Antenna SMA Antenna Error LED Status LED Tx LED Dial LED A - Alarm P - Panic OC - Open/Close M - Mains Tip/Ring Contact ID 5 - Zone 105 6 - Zone106 Tel. Line Ri Ti O1 A P OC M 5 6 n/a n/a WAN LAN

GREEN TX LED

ON = Device Transmitting to Sigfox network

RED Dial LED

Flashing - Tone dialed on Telephone TIP/RING interface